

# HOME DECORATORS

## *collection*


MADISON LIFT-TOP STORAGE BENCH 48"W

### Assembly Instructions

HDC #:78259 MFG#:MD0011-L

Please read over the instructions; it will be a time-saver in the long run.


Note: Before Assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

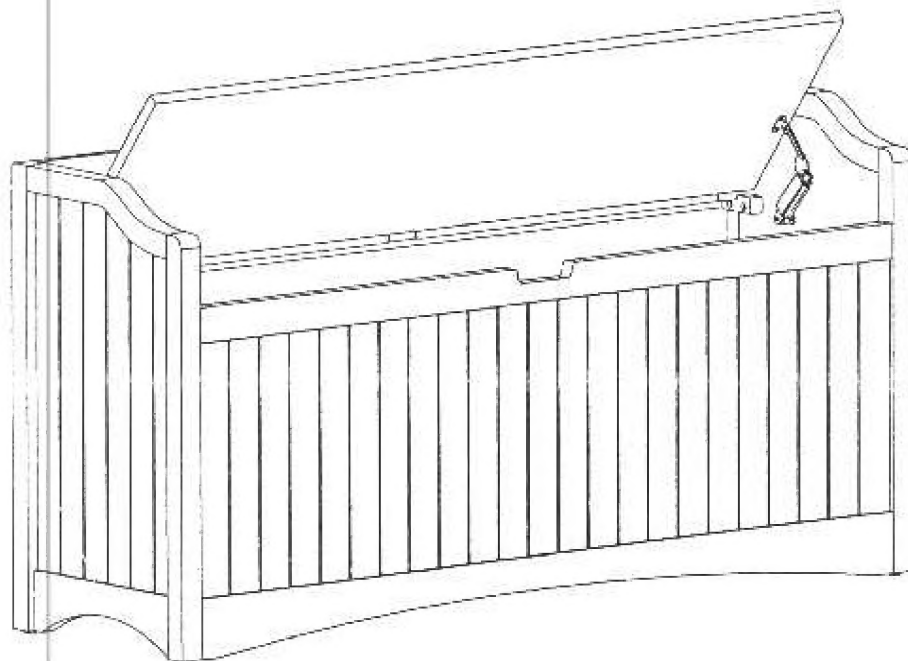




# Parts Check List

Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

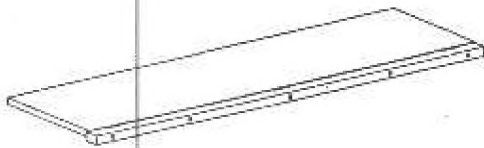

① Top Panel-1

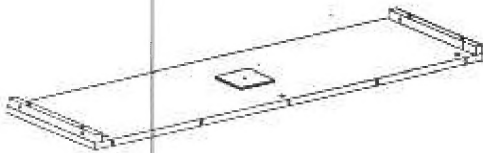


② Bottom Panel-1




③ Left Side Panel-1




④ Right Side Panel-1

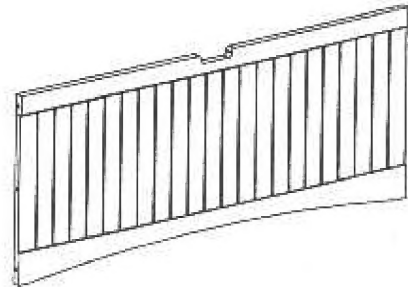

⑤ Front Panel-1

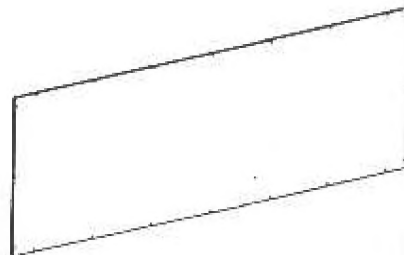

⑥ Back Panel-1

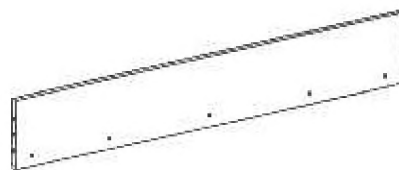

⑦ Backboard-1



⑧ Foot-1





# Hardware Check List

Please take all hardware out of the hardware bag.

A  Cam-bolt-11

B  Cam-lock-11


C  Cover-11


D  Allen Wrench-1 ( $\varnothing 1/4"$ )


E  Right Safety Hinge-2 (L-1, R-1)

F  Flat Head Screw-8 (#6×14mm)

G  Allen Bolt-3 ( $\varnothing 1/4" \times 1"$ )

H  Allen Bolt-4 ( $\varnothing 1/4" \times 1-1/4"$ )

I  Lock Washer-7 ( $\varnothing 1/4"$ )

J  Flat Washer-7 ( $\varnothing 1/4" \times 16D$ )



K  Round Head Screw-20 (#6×14mm)

L  Wood Dowel-10 ( $\varnothing 8 \times 30mm$ )

M  Glue-1 (25g)





When inserting cam-bolts, the shoulder should be flush with the surface. If using an electric screwdriver, be careful not to over tighten the Cam-bolt, this can cause damage.

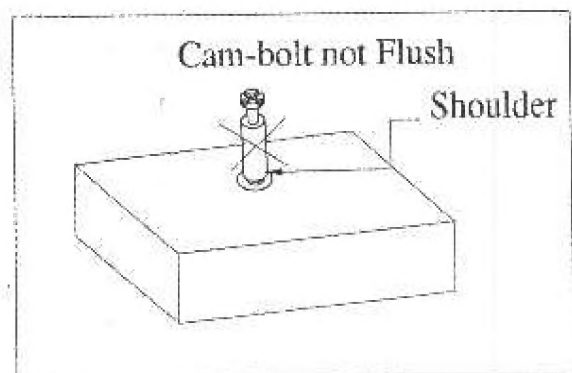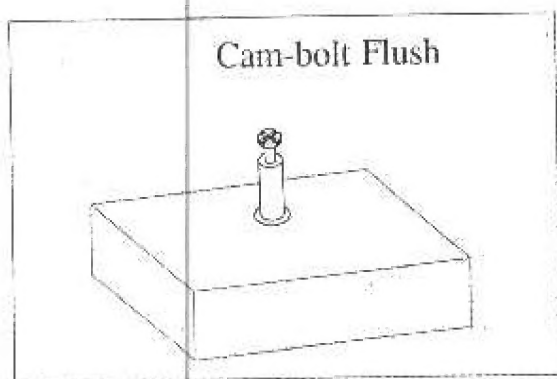

### How to use Cam-Locks


Cam-locks should be inserted into their designated holes with the arrow pointing to the nearest edge. The coordinating Cam-bolt will be inserted into the Cam-lock. Using the allen wrench or a flat-head screwdriver, tighten the Cam-locks until you feel resistance. Over tightening the Cam-lock may break the cam-lock.

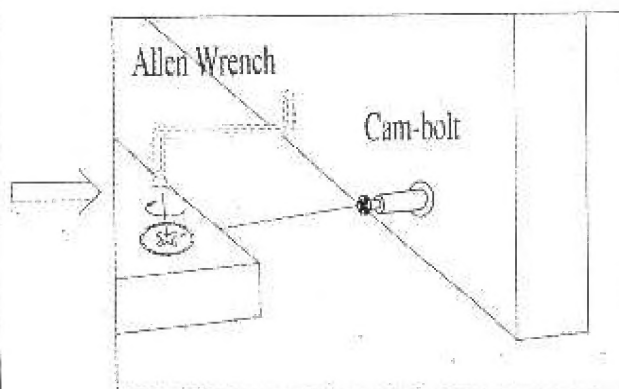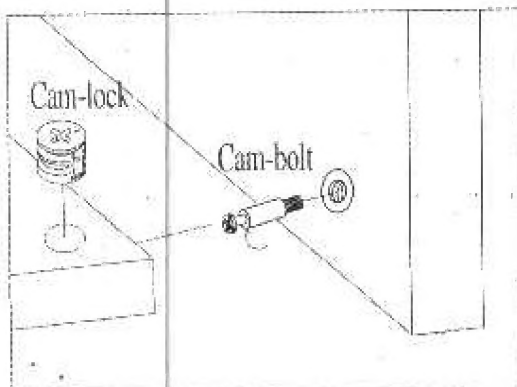








1.Fill hole 1/4 full of Glue (M) to the wood dowel hole of Top Panel(1)and Bottom Panel(2)and Front Panel(5)and Backboard(7).then insert Wood dowels (L).

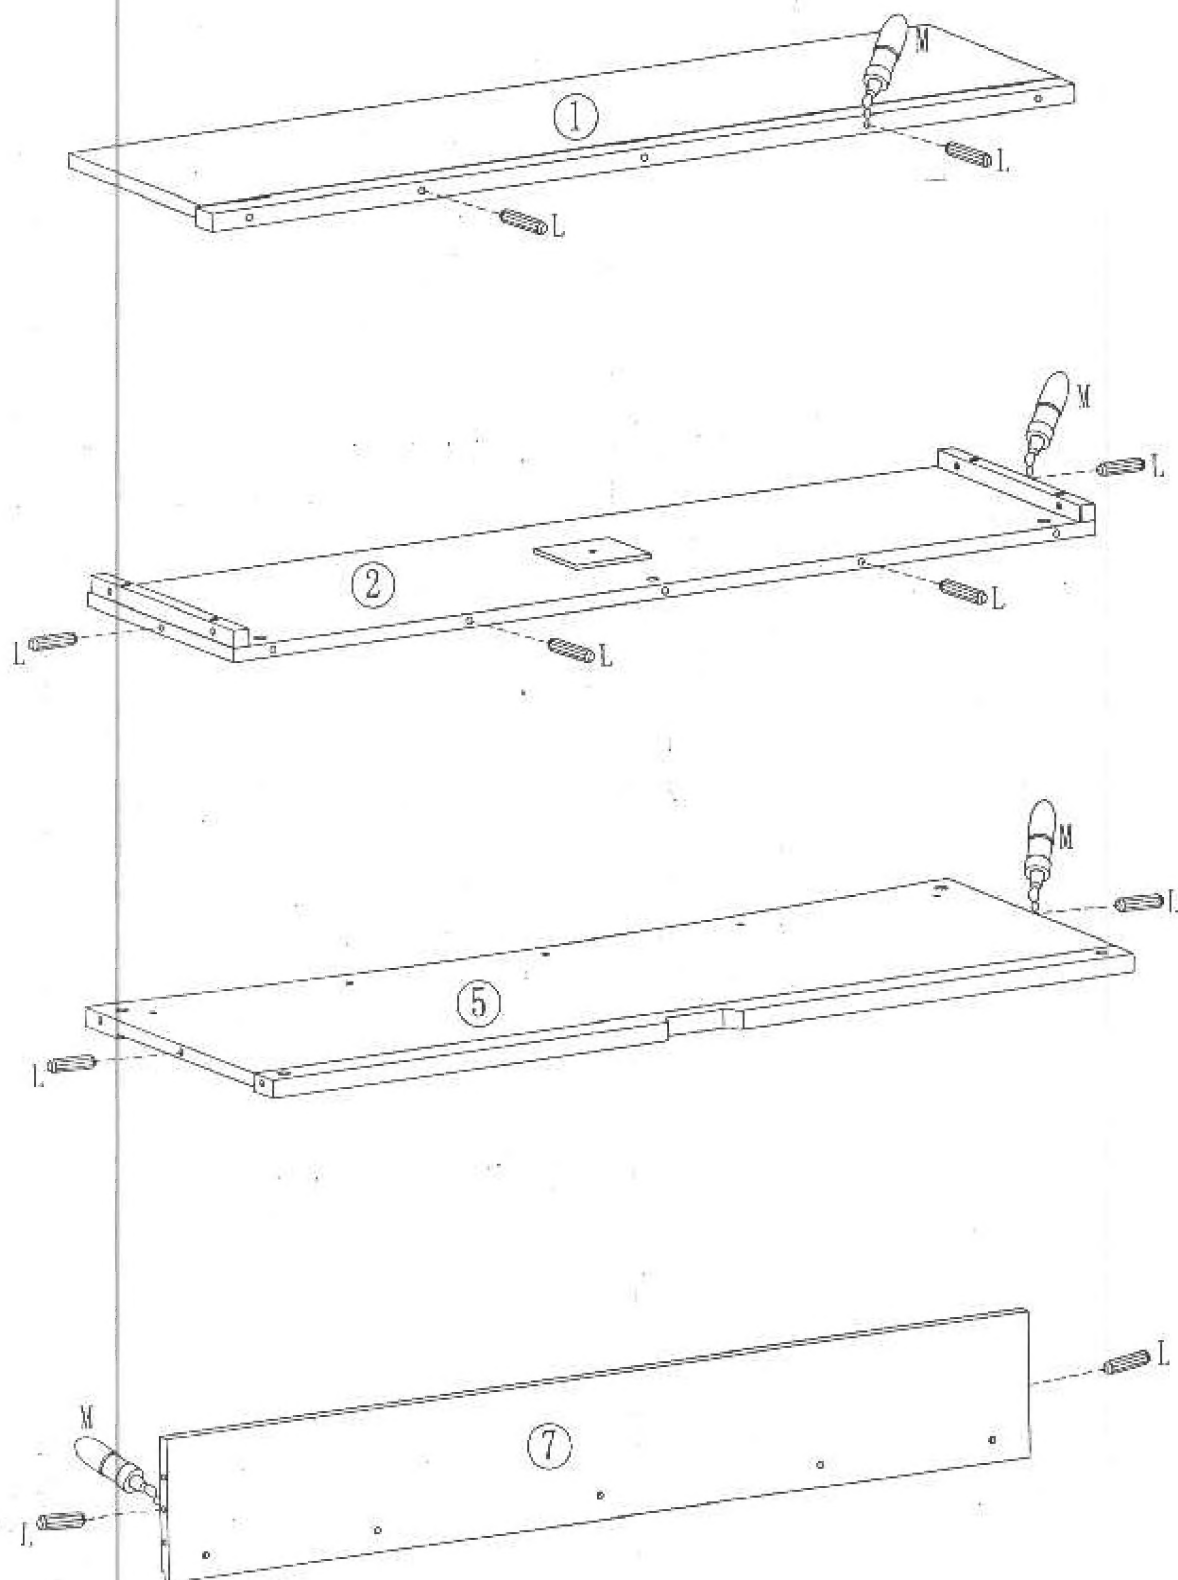




2. Screw Cam-bolts(A)clockwise into thg threaded holes in Side panel(3&4) and Front panel(5).

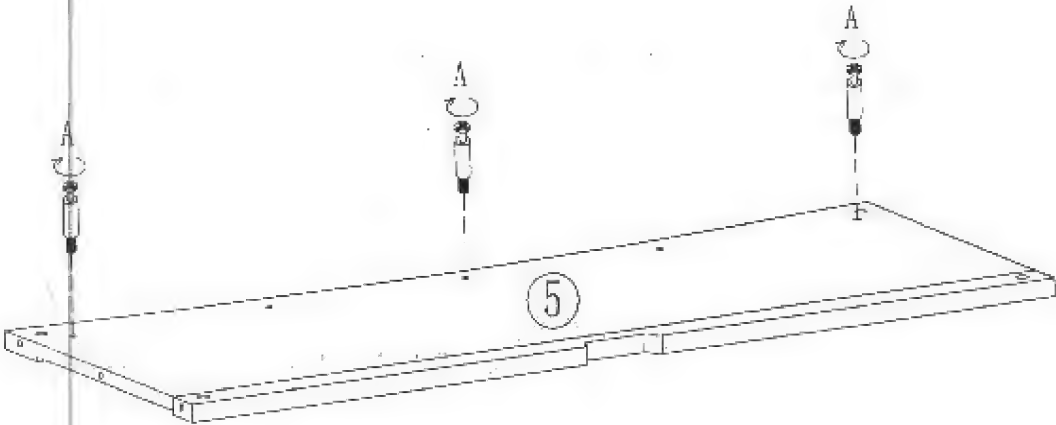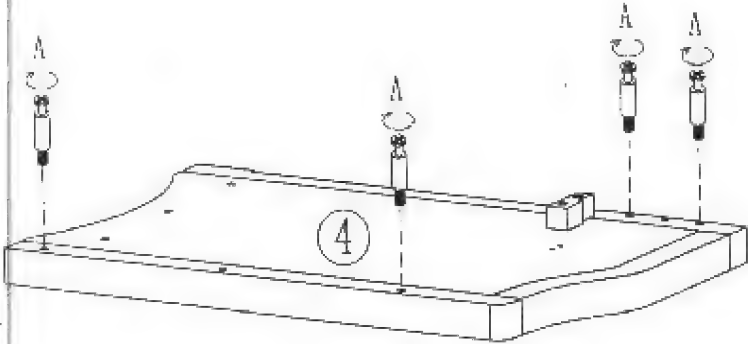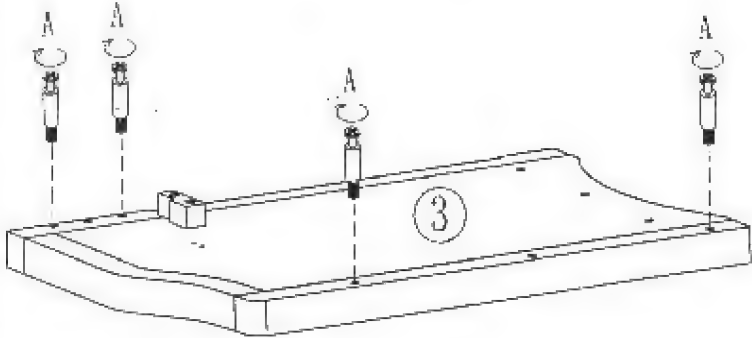




3. Attach Front panel(5) and Backboard(7) and Top panel(1) to Side Panel(3&4) and Bottom Panel(2) to With Cam-Lock(B)by allen Wrench(D)as figure shown,cover all Cam-Locks(B)With Cover(C)and Bolt(G&H),Lock Washer(I),Flat Washer(J)by Allen Wrench(D) tighten. Rotate Foot (8) clockwise to tight them into bottom panel(2).as figure shown.

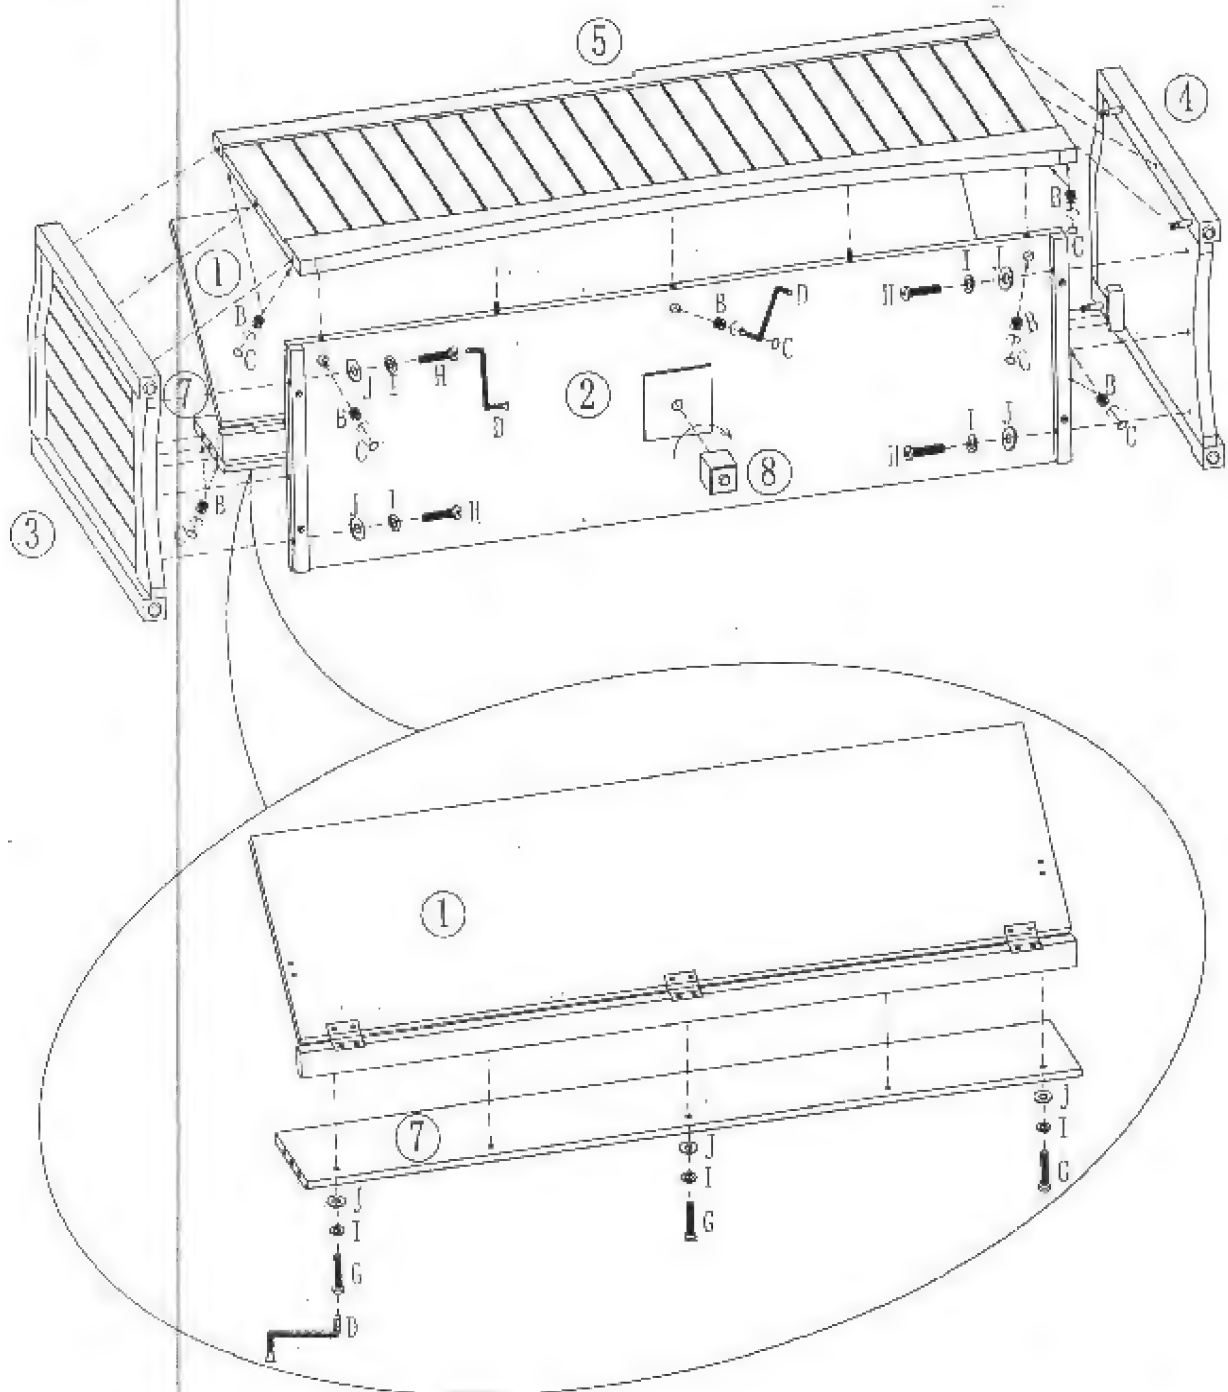




4. Attach Long Hinge-2 (E) to Top Panel(1) and Side Panel(4) by Short Flat Screw(F) by screwdriver. Repeat next install.

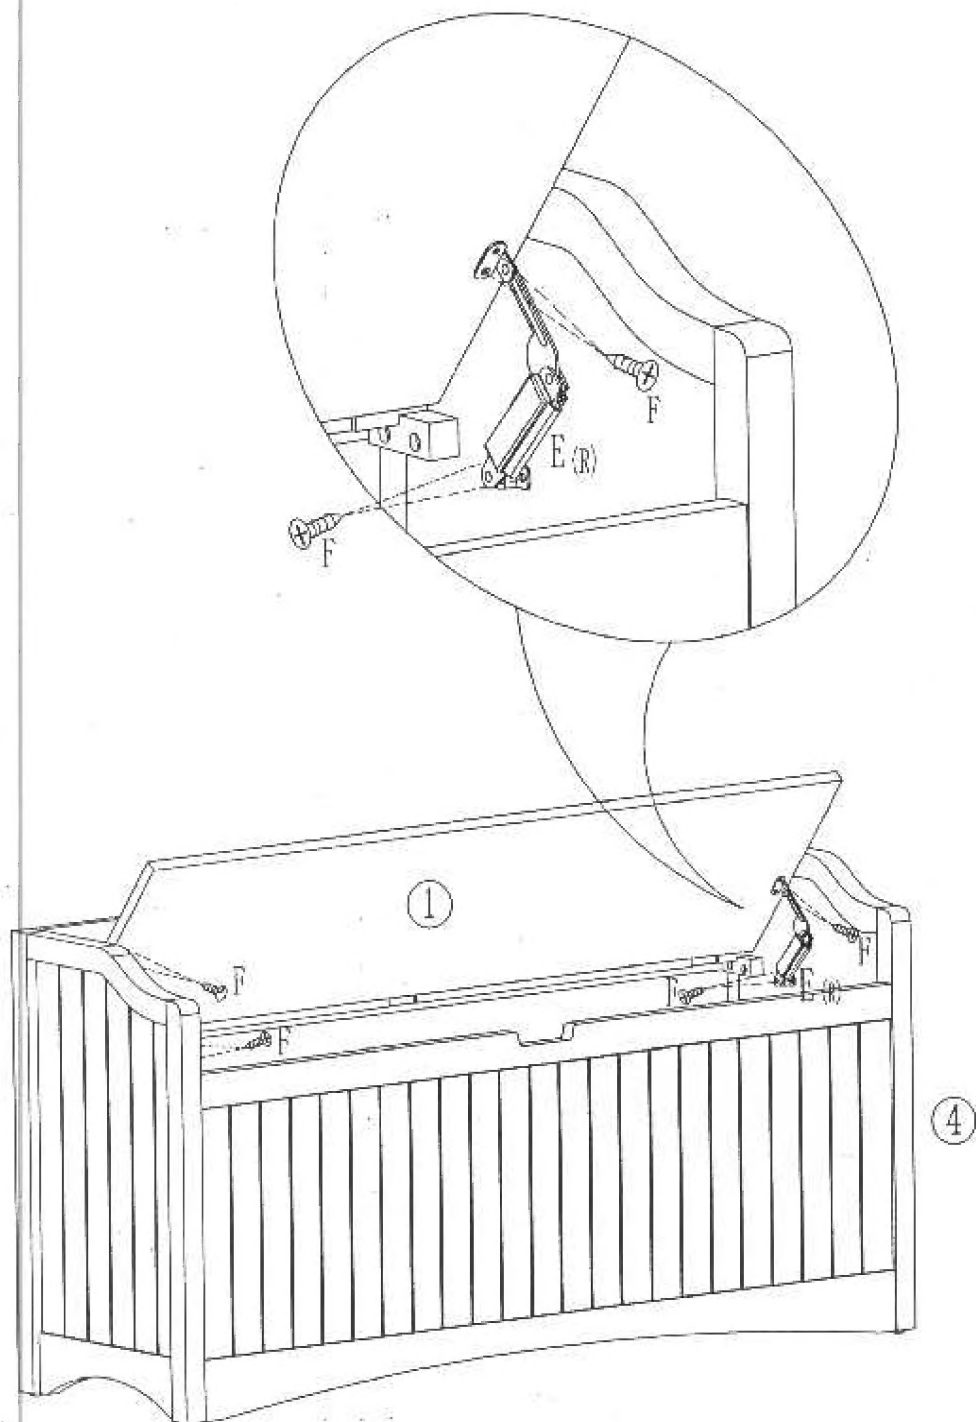





5. Adjust so the space around drawer are even and then tighten Upper Back Panel(6) of cabinet with Round Head Screw (K) as illustrated.

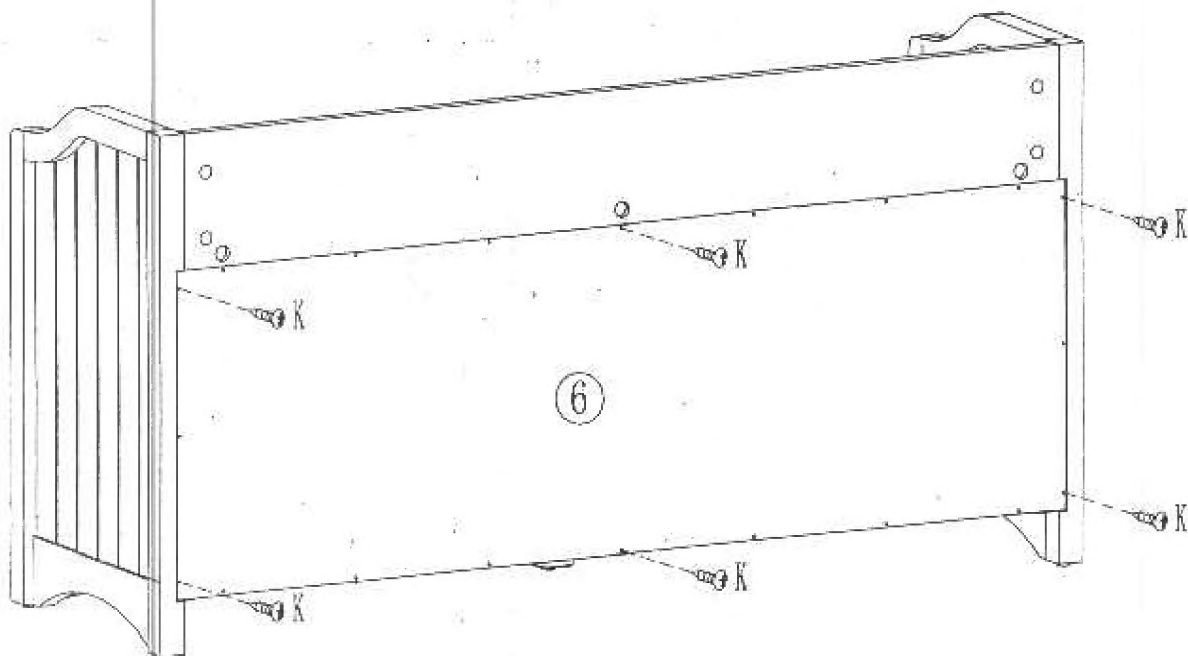

THE ASSEMBLY IS COMPLETE NOW.

